



1 - HEIGHT ADJUSTMENT LEVER

To raise

With the right hand, pull handle outwards while taking your weight off chair

—

To lower

With the right hand, pull handle outwards while seated



2 - TILT LOCK / UNLOCK LEVER

To lock tilt recline

With the left hand, pull handle outwards while taking your weight off chair

—

To unlock tilt recline

With the left hand, push lever inwards and unlock the tilt using your body weight



3 - SEAT DEPTH ADJ. LEVER

To move forward / backward

With the right hand, pull handle outwards and, using your body weight, bring the seat to the desired position

PRODUCT NAME

Epsilon Integrated seat

TYPE

Weight activated mechanism

FEATURES

Height adjustment

—

Tilt lock

—

Seat depth adjustment